SONY

* 4 1 3 6 1 3 9 1 1 * (1)
4-136-139-11(1)

Quick Setup Guide

DAV-HDX589W

You can confirm that the System and TV are connected correctly using the Setup Disc.

For details, see the Operating Instructions.

1 Connecting the speakers

Connect the speaker cords to match the color of the SPEAKER jacks of the unit.

Rear panel of the main unit

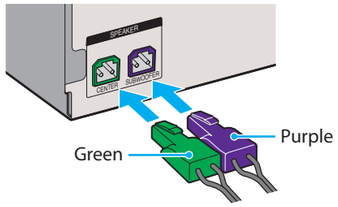

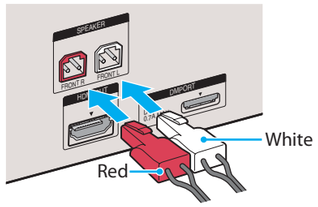

Rear panel of the surround amplifier

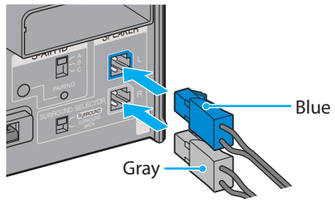

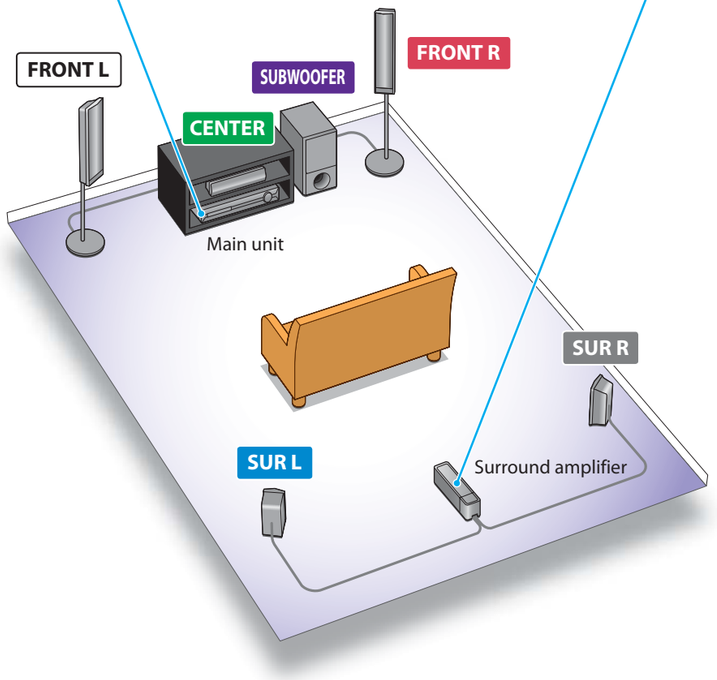

To connect speaker cords to the speaker

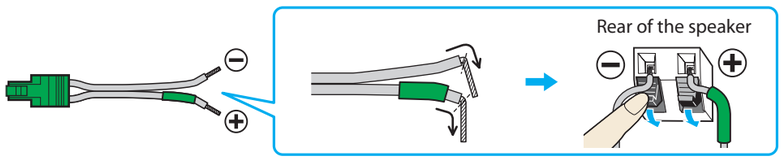

©2009 Sony Corporation Printed in China

2 Connecting the TV

Depending on the jacks on your TV, select the video and audio connection method.

Video connection method

Method 1

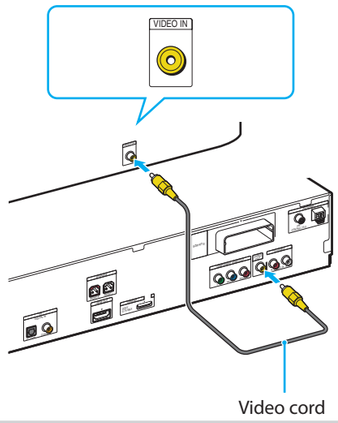

Video cord

Method 2

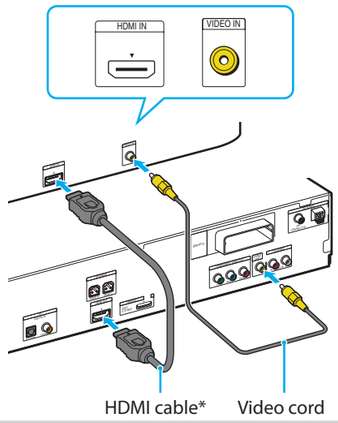

HDMI cable* Video cord

Method 3

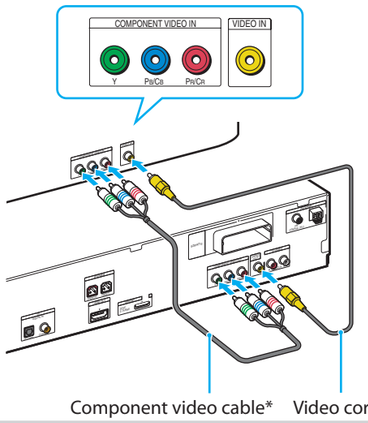

Component video cable* Video cord

*Not supplied

Audio connection method

Method 1

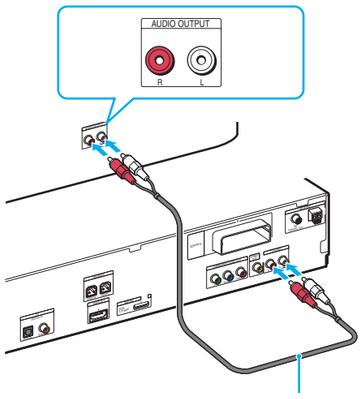

Audio cord*

Method 2

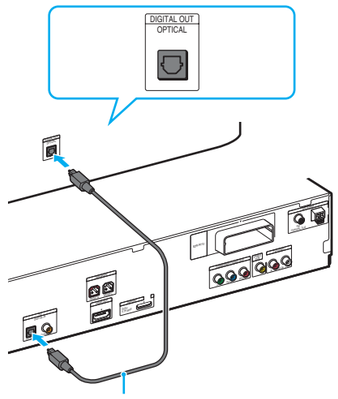

Digital optical cord*

Method 3

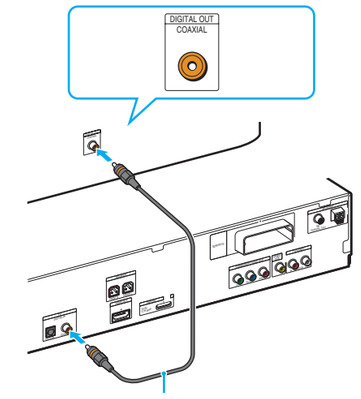

Digital coaxial cord*

*Not supplied

Continued

3 Enabling wireless transmission

1 Insert the wireless transceiver.

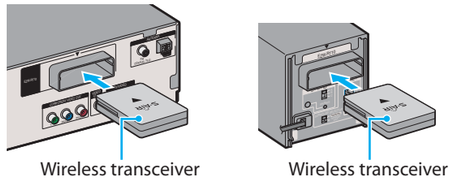

2 Set the S-AIR ID switch to "A."

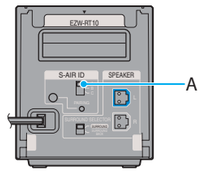

3 Connect the AC power cord.

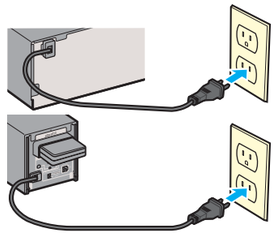

4 Turn on the power of the main unit, the surround amplifier, and the TV.

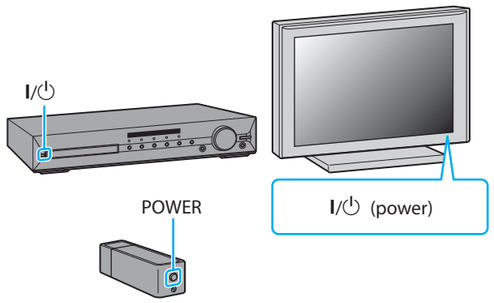

4 Performing the Quick Setup

Note

Do not insert a disc before performing the Quick Setup.

1 Switch the input selector on your TV to display "SONY Home Theatre System."

2 Set each following item, using ←/↑/↓/→ and ⊕.

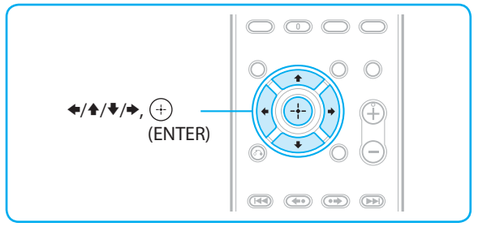

Note

Displayed items vary depending on the area.

⊕

Select an on-screen language.

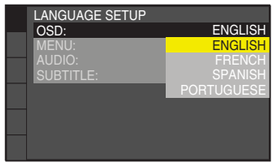

↑/↓, ⊕

Select the aspect ratio of the connected TV.

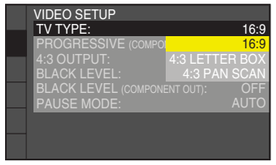

↑/↓, ⊕

Select [ON] when you connect the main unit and the TV with an HDMI cable.

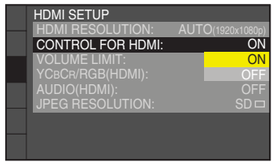

↑/↓, ⊕

Select the speaker formation.

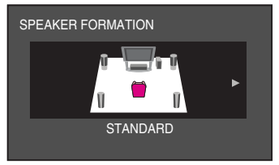

←/→, ⊕

Connect the calibration mic and set it at the listening position.

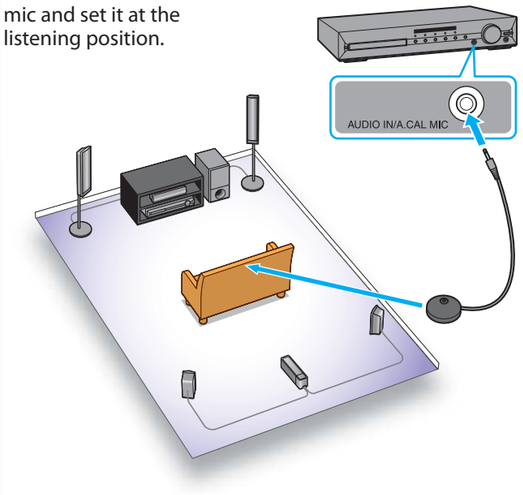

⊕

Select [YES] to perform [AUTO CALIBRATION].

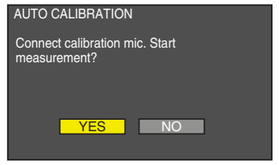

←/→, ⊕

Select [YES] to save the measurement results.

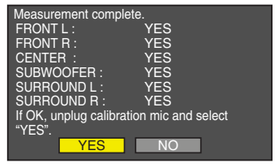

←/→, ⊕

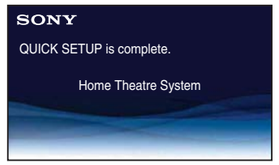

Listening to TV sound from all speakers

1 Press FUNCTION +/– to display "TV/VIDEO."

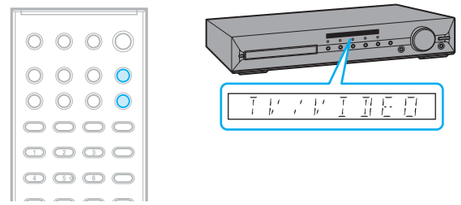

2 Press SYSTEM MENU.

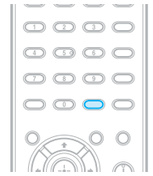

3 Press ↑/↓ to display "DEC. MODE," then press ⊕.

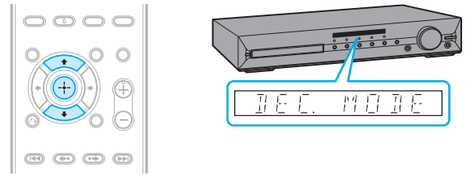

4 Press ↑/↓ to display "PRO LOGIC," then press ⊕.

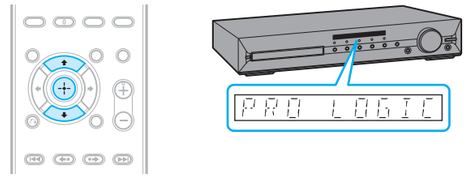

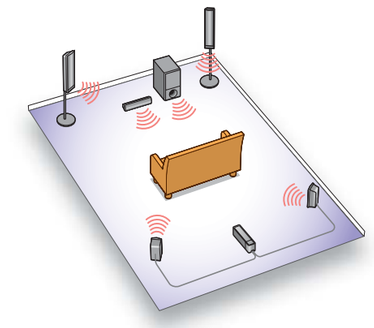

5 Press SYSTEM MENU to exit the menu.